



IMAGINATION STARTS HERE

## Store Front Theater

### Contents:

- Center Panel - 2 Wooden feet
- 4 flat head screws - 1 wood curtain rod
- 1 pair of curtains - 2 small screws - 2 brown buttons

You will need a Phillips screwdriver.

Read instructions completely before beginning.

### Step 1:

Attach feet to panel, positioning as shown to the right using Phillips screwdriver. Note: screw heads will fit into recessed side of predrilled holes.

### Step 2:

Slide curtain rod through a hole in the theater's side, leaving an end in the theater's center opening. Attach curtain to rod by threading curtain hem onto rod. Position rod so it rests in both holes on the theater's sides. Using the small screws, attach brown buttons next to the curtain rod holes. The buttons will hold the curtain rod in place, pivoting to allow curtain removal if desired.

### Store Front Art Surface

Your Store Front Theater comes with either a chalk or wipe-off whiteboard surface.

#### Chalk Surface

Our green chalk surface is ready to use but will perform best when "seasoned" before general use. To reduce "ghosting", use the edge of a piece of white chalk to cover the entire surface with chalk dust. Remove excess dust with a dry cloth or chalkboard eraser. The resulting surface is said to be "seasoned"! If you are unsure of your chalk, test it on a corner of the board first to insure easy erasure. Use a soft cloth or chalk eraser to clean board, do not use water.

#### Wipe-off Marker Board Surface

Special wipe-off markers are erased by rubbing with a soft cloth. Whatever marker brand you choose, first test it on a corner of the board to insure easy erasure. Clean your whiteboard regularly. Marker left on the surface for several days can be difficult to remove and may leave a stain.

### WARNING—ADULT ASSEMBLY REQUIRED!

Assembly hardware (screws) are small, so are a potential safety hazard to children prior to being used to assemble the theater.

Once assembled, an adult should check hardware periodically for tightness.

Dispose of plastic bags, packing material and extra hardware to avoid potential choking hazards.



**We have designed our Store Front Theater for both stability and mobility! Light, yet sturdy, it goes where you and your audience go!**

Manufactured by Beka, Inc. • 542 Selby Avenue • St. Paul, Minnesota 55102 • USA

1-888-999-(BEKA)2352 • [www.Bekainc.com](http://www.Bekainc.com)

# Thank you for choosing Beka!

Your new Beka product is  
designed for fun and function,  
and made by Minnesota craftsmen  
in our St. Paul shop, where  
we've produced specialty  
products since 1973.

Our goal is simple:  
Make quality wood items that  
encourage imaginations  
and enhance creative play;  
then provide fast, friendly,  
and reliable service.

We're working hard to do just that!

We're always adding new items for you  
to enjoy, so please ask your favorite  
specialty retailer about other  
Beka products or  
to learn more about Beka,  
visit our web site  
[www.Bekainc.com](http://www.Bekainc.com)  
1-888-999-(BEKA)2352

## **Warning – Adult Assembly Required!**

Enclosed hardware includes sharp points and small pieces,  
so loose hardware may present hazards to children.

Once assembled, an adult should  
check hardware periodically for tightness.

Dispose of plastic bags, packing material and any unused  
hardware appropriately.