



IMAGINATION STARTS HERE

PICTURE FRAME EASEL



Warning – Adult Assembly Required!

Enclosed hardware includes small pieces, so may present a choking hazard to children under 3.

Once assembled, an adult should check hardware periodically for tightness.

Always dispose of unused hardware & plastic bags appropriately, as it may pose choking hazards .

Your Picture Frame Easel is ready for use. Place it on a table, hang it on a Wall with the cord, or use the 2 wall screws to screw to a wall. Add paper as desired.

Contents:

- Framed Art Surface
- Stand-Off Blocks & Paper Holder Rod
- Paper Roll
- Hardware & Cord



Mounting a Paper Roll:

- Remove wing nuts and washers from above the stand-off blocks.
- Remove Paper Holder Rod; slide the rod through the Paper Roll.
- Re-position the Paper Holder Rod over the bolts going through the Stand-Off Blocks; secure with washers & wing nuts.
- To use paper, slide it under the top paper cutter strip, across the art surface and under the cutter strip at the bottom of your easel.
- To tear off used paper: Holding the Picture Frame Easel in place, pull paper down to desired point. Place your hand on the paper still over the art board to hold it in place and tear paper by lifting it up against the cutter strip. If you prefer, you can place the entire easel on a table for stability; un-roll paper and tear it off as usual.

Manufactured by:

Beka, Inc. • 542 Selby Avenue • St. Paul, Minnesota 55102 • USA
1-888-999-BEKA(2352) • www.Bekainc.com

Art Surface: Your Picture Frame Easel features a dry-erase marker board surface. For best results, use high quality dry-erase markers. Always test markers on a corner of the board to insure easy erasure before allowing general use, as the performance of individual markers may vary. Clean the entire surface regularly. Even the best markers can leave stains if left on the art surface for extended periods of time. If stains do occur, many may be removed with special whiteboard cleaners (“cleaners” should only be used by adults). Do not use abrasive household cleaners on the marker board surface. They can damage the clear surface coating that allows dry-erase markers to be used. Pro tip: If a wipe off marker has dried and is hard to erase, use the same marker to color over the old drawing to help make it easier to erase.

Have Fun!!!

Thank you for choosing Beka!

Your new Beka product is
designed for fun and function,
and made by Minnesota craftsmen
in our St. Paul shop, where
we've produced specialty
products since 1973.

We're always adding new items for you
to enjoy, so please ask your favorite
specialty retailer about other
Beka products.

To learn more about Beka,
visit our web site
www.Bekainc.com

Thank you,
The Beka Folks