



IMAGINATION STARTS HERE

WARNING—ADULT ASSEMBLY REQUIRED!

Enclosed hardware includes sharp points and small parts, so may present hazards to children prior to assembly.

After assembly, an adult should check hardware periodically to insure it is tight

Dispose of plastic bags and any extra hardware to avoid potential choking hazards.

Store Front Theater

Assembly Instructions

Contents:

- Center Panel 2 Wooden feet
- 4 flat head screws 1 wooden curtain rod
- 1 pair of curtains

You will need a Phillips screwdriver.
Read instructions completely before beginning.

Step 1:

Attach feet to panel as illustrated to the right using a Phillips screwdriver. Note: screw heads will fit into recessed end of predrilled holes.

Step 2:

Slide curtain rod to one side exposing end of dowel. Attach curtain to rod by threading curtain hem onto rod. Reposition rod in panel.

Store Front Art Surface


Your Store Front Theater comes with either a chalk or wipe-off whiteboard surface. Be sure to follow the recommendations listed below that apply to your specific theater.

Chalk Surface

Our green chalk surface is ready to use and is compatible with any standard chalkboard chalk. If you are unsure of your chalk, test it on a corner of the board first to insure easy erasure. Use a soft cloth or chalk eraser to clean board.

Wipe-off Marker Board Surface

Special wipe-off markers are erased by rubbing with a soft cloth. Whatever marker brand you choose, first test it on a corner of the board to insure easy erasure. Clean your whiteboard regularly. Marker left on the surface for several days can be difficult to remove and may leave a stain.

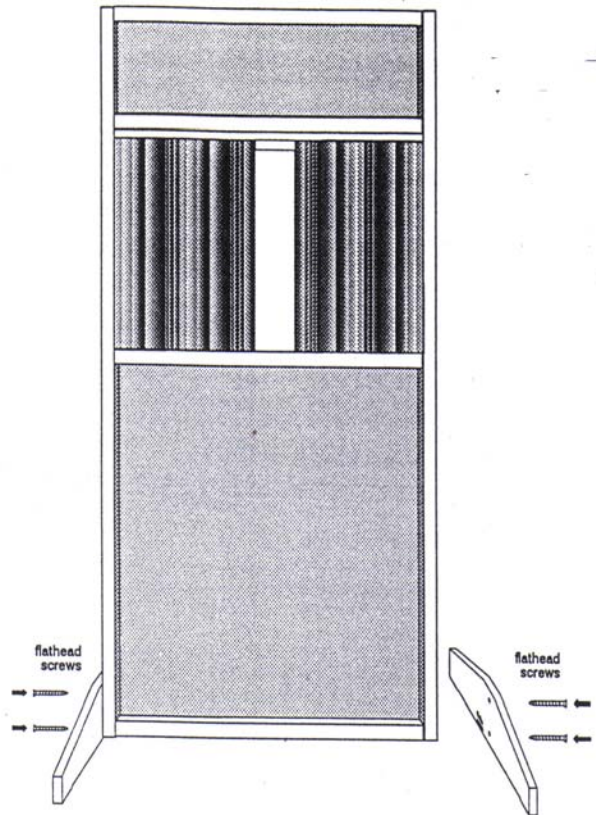

We have designed our **Store Front Theater** for both stability and mobility.

Light, yet sturdy, it goes where you and your audience go.