



IMAGINATION STARTS HERE

Teacher's Easel

Contents:

- | | |
|-----------------------|--------------------|
| 1 – Easel, Assembled | 2 – Carriage Bolts |
| 1 – Wooden Book Lip | 2 – Wing Nuts |
| 2 – Wooden Dowel Pins | 2 – Washers |

Beka's **Teacher's Easel** is an adult-sized, single-sided easel. It features a wipe-off marker art surface, a lip to support books or display pads, and a center storage tray. This easel has been popular for use in classrooms, offices, and homes.

Warning – Adult Assembly Required!

Enclosed hardware includes sharp points and small pieces, so may present hazards to children.
Once assembled, an adult should check hardware periodically for tightness.
Dispose of plastic bags and unused hardware appropriately.



1. Each easel is assembled and shipped ready to use. Simply stand the easel upright and open its legs for stability.
2. Swing the center storage tray into place, placing the notches over the dowel below the white board surface.
3. Push the wooden dowel pins into the holes on the book lip's flat surface.
4. Use the carriage bolts to attach the lip to the easel.
5. Secure with the washers and wing nuts.

Be sure to test wipe-off markers on a corner of the marker board before using, to insure easy erasure. The marker should come off after rubbing with a dry cloth. Please clean the surface regularly, as any marker lines left on the board for long periods may be difficult to remove, and may stain the surface.